


# Fuse & Relay Location

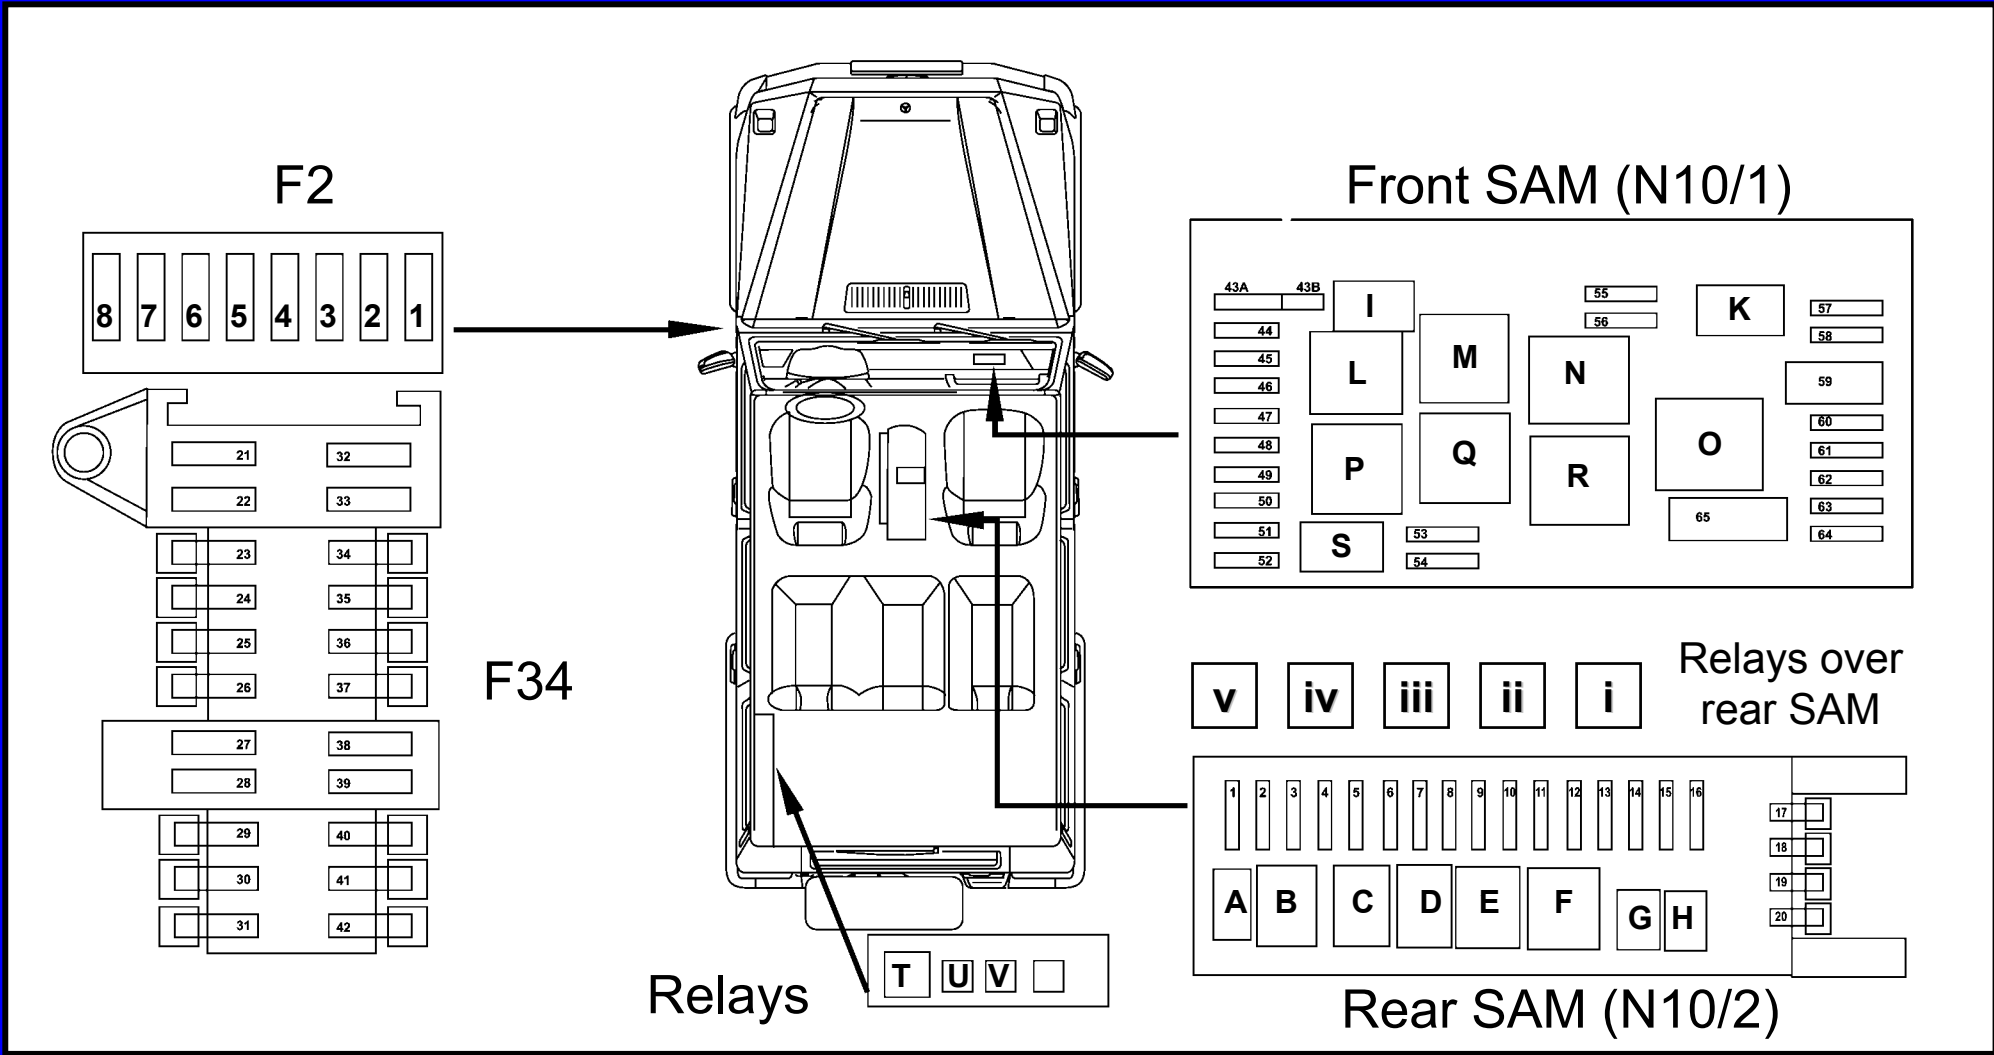

# Fuse and Relay Legend

## F34 Fuse data

21	- DCM FL	30A
22	- DCM FR	30A
23	- Rear reading light	5A
24		
25	- UCP / Front seat heaters	10A
26	- Illuminated door sill	7.5A
27	- LF ESA	30A
28	- Interior socket	30A
29		
30	- HVAC blower	40A
31	- EIS	20A
32	- LR DCM	30A
33	- RR DCM	30A
34	- TELE AID	7.5A
35		
36		
37	- Diff. lock relay	15A
38	- RF ESA	30A
39	- Transfer case module	40A
40		
41	- UCP / AC	7.5A
42	- Inst. cluster	7.5A

## F2 Fuse data

1		
2	- ESP / Stop lamp switch N.C.	10A
3		
4	- Steering angle sensor / Stop lamp switch N.O.	15A
5		
6	- Rear seat heating module	20A
7	- L Auxiliary fan / Steering angle sensor	20A
8	- R Auxiliary fan	20A

## Relays (at left rear of vehicle)

T	- Transmission output speed sensor ballast (N36)
U	- Tailgate central locking (K44)
V	- Rear window wiper (K68)

## Relays (over rear SAM)

i	- L Auxiliary fan (K9/1)
ii	- R Auxiliary fan (K9/2)
iii	- High pressure pump relay ESP (K60)
iv	- Stop lamp suppression (K55)
V	- Diff. lock & vac. pump (K36)

# Front SAM (N10/1) Legend

43A	- Fanfare horns term. 15R	15A
43B	- Fanfare horns term. 30	15A
44	- Cell phone cradle term. 15R	5A
45	- Airbag term. 15R	10A
46	- Wiper on / off	20A
47	- Cigar lighter / glove term. 15R	15A
48	- Ignition Coils term. 15	15A
49	- Airbag term. 15	10A
50	- Rear HS / lights term. 15R	5A
51	- Instrument cluster	7.5A
52	- Starter	15A
53a	- Engine / M1 term. 87	15A
53b		
54a	- Engine / M2 term. 87	15A
54b		
55	- TC / ETC	7.5A
56	- Diff, locks / PTS	7.5A
57	- EIS term. 30Z	5A
58	- F2	40A
59	- ABS return pump	50A
60	- ABS valve block	40A

61		
62	- Light switch term 15R	5A
63	- Diff. lock / lights	5A
64	- Radio / COMAND	10A
65	- Air injection pump	40A

## Relays

I	- Fanfare horns
K	- Chassis term. 87 (ETC,ESM,TC, diff. switch)
L	- Wiper speeds 1 & 2
M	- Terminal 15 (IC, AB, TELE AID, light switch)
N	- F2 supply
O	- Air pump
P	- Terminal 15R (AB, RSH, glove box light, cigar)
Q	- Wiper on / off (cutoff to L)
R	- Engine term. 87 (engine, R SAM, wiper)
S	- Starter

# Rear SAM (N10/2) Legend

1	- Terminal 15R2 / Tes left	30A
2	- Terminal 15R2 / Tes right	30A
3		
4	- Fuel pump	15A
5		
6		
7		
8	- Antenna module, ATA siren tilt sensor	7.5A
9	- OCP	25A
10	- Rear window defroster	20A
11		
12		
13	- Pressure pump term. 15	20A
14	- Rear wiper	15A
15	- Filler cap	10A
16	- VCS	5A
17	- Trailer ECM	20A
18	- Trailer socket	20A
19	- Pressure pump term. 30	20A
20	- Central locking tailgate	10A

## Relays

A	- Fuel pump
B	- Relay 2 terminal 15R
C	
D	
E	- Rear window defroster
F	- Relay 1 terminal 15R (TELE AID, ETC speed sensor ballast, rear wiper
G	- Filler cap polarity reverser 1
H	- Filler cap polarity reverser 2